



Notes:

1. Introduction of humidity may be required based on outside humidity level.
2. Assumed three thermostats:
 - Outside – turn economizer on when outside air meets required temperature while shutting Liebert off.
 - Inside duct – if air in cold duct is too cold, introduce warm server air.
 - Inside – If Liebert stops working, turn on economizer. Introduction of ice/ backup A/C unit would ensue.

